

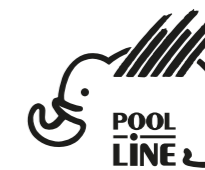


- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

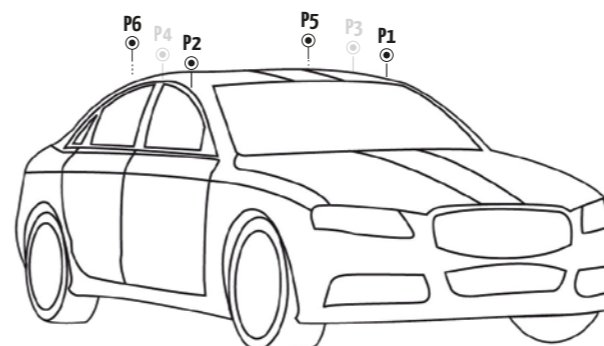

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1085

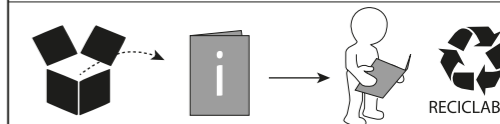




110004

Review 5/2019




			P1	P2	P5	P6
AUDI						
100	86 - 91	4	16	16	16	16
100	91 - 94	4	16	16	16	16
200	89 - 94	4	16	16	16	16
200	94 -	5	16	16	16	16
100 AVANT	86 - 91	5	16	16	16	16
A-6 C5	97 - 04	4	16	16	16	16
A-6 C5	98 - 00	4	16	16	16	16
COUPE B3	88 - 96	2	16	16	16	16
HONDA						
ACCORD VI	97 - 02	5	16	16	16	16
HYUNDAI						
ATOS	97 - 02	5	16	16	16	16
ATOS PRIME	99 - 08	5	16	16	16	16
MAZDA						
626	97 - 2	4/5	16	16	16	16
323 (BG)	90 - 96	4/5	16	16	16	16
MITSUBISHI						
GALANT (VI)	87 - 93	4/5	16	16	16	16
GALANT (VII)	93 - 96	4/5	16	16	16	16
NISSAN						
SUNNY (N13)	86 - 90	3	16	16	16	16
SUNNY (N14)	91 - 95	3	16	16	16	16
RENAULT						
14	76 - 83	5	16	16	16	16
LAGUNA I	93 - 00	5	16	16	16	16
ROVER						
600	93 - 99	4	16	16	16	16
SKODA						
FAVORIT	87 - 93	5	16	16	16	16
TOYOTA						
MR2 (W3)	99 - 07	2	16	16	16	16
VOLKSWAGEN						
PASSAT B3	88 - 92	4	16	16	16	16

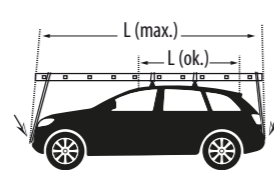


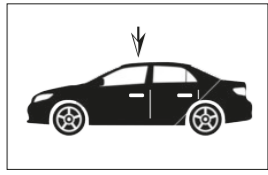




1

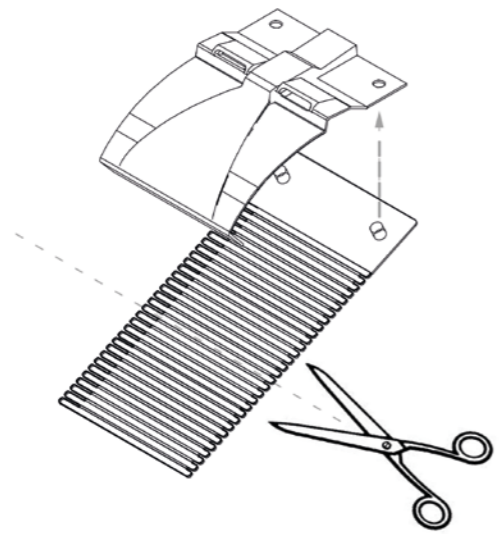


2

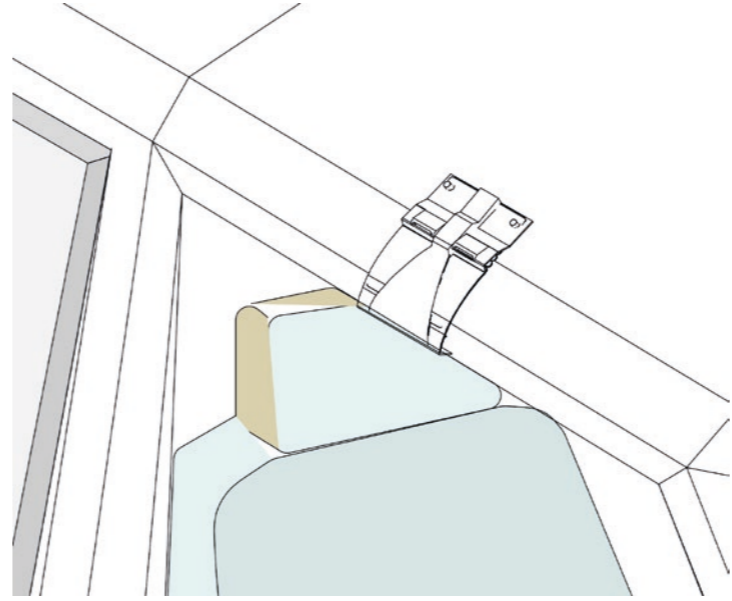


3

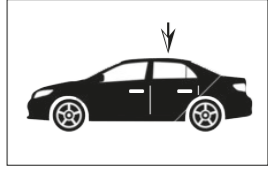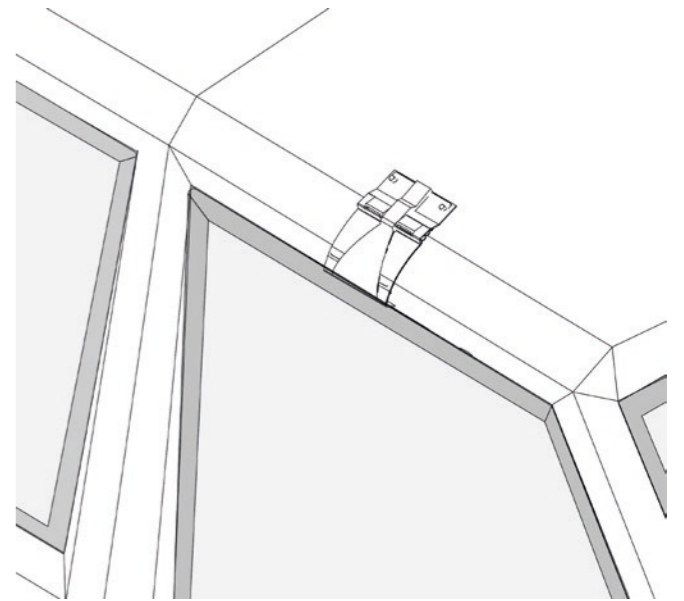




1

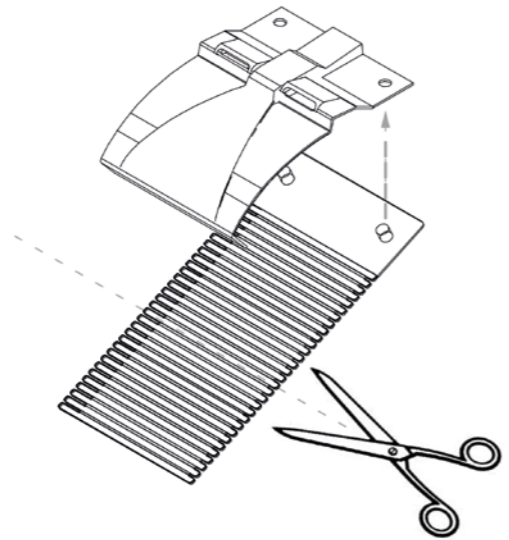


2

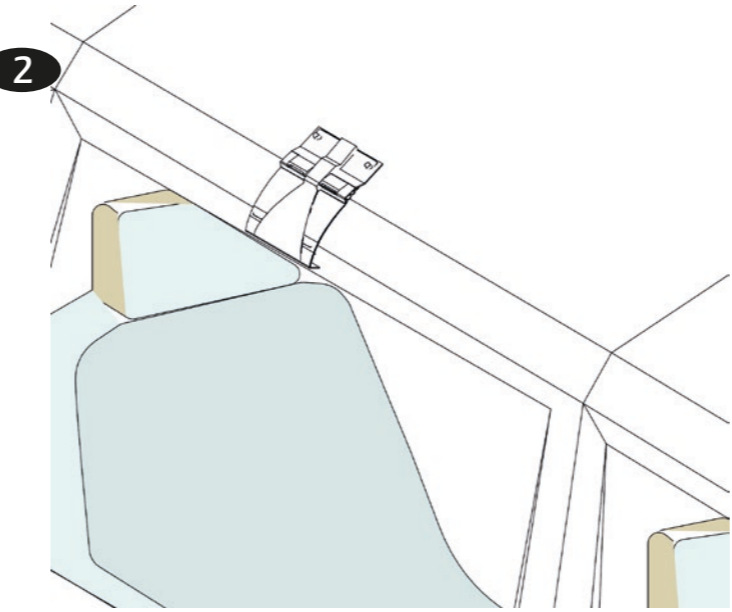

3

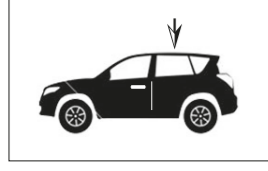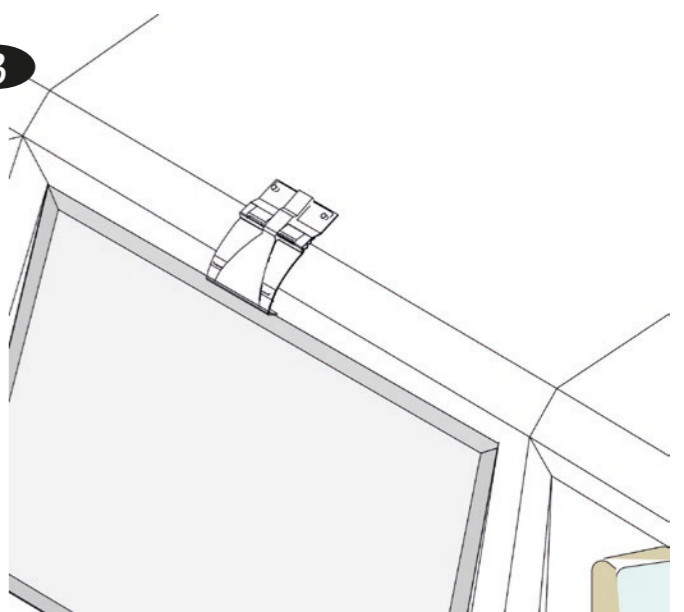

1

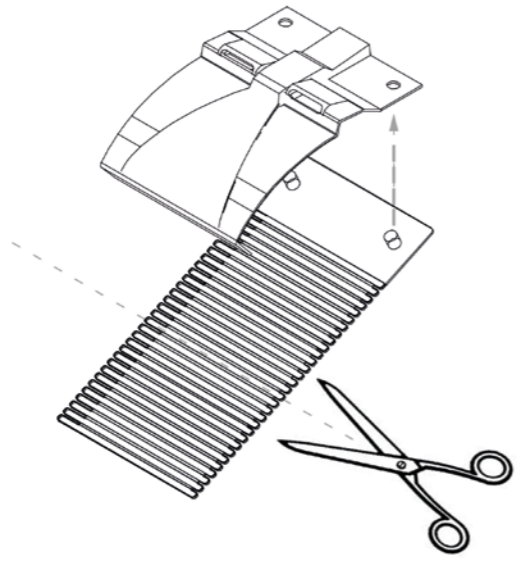

2

