



- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikli montaj Montaj kiti

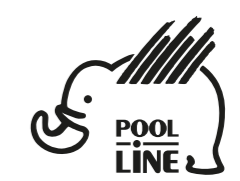



POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1085

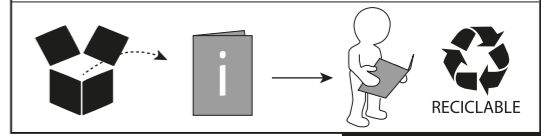

110078

Review 7/2016

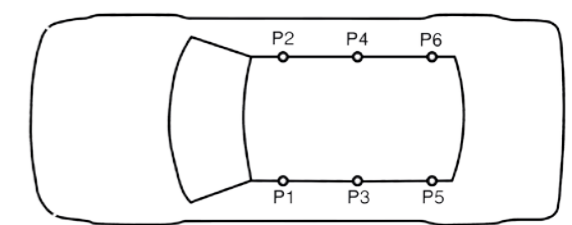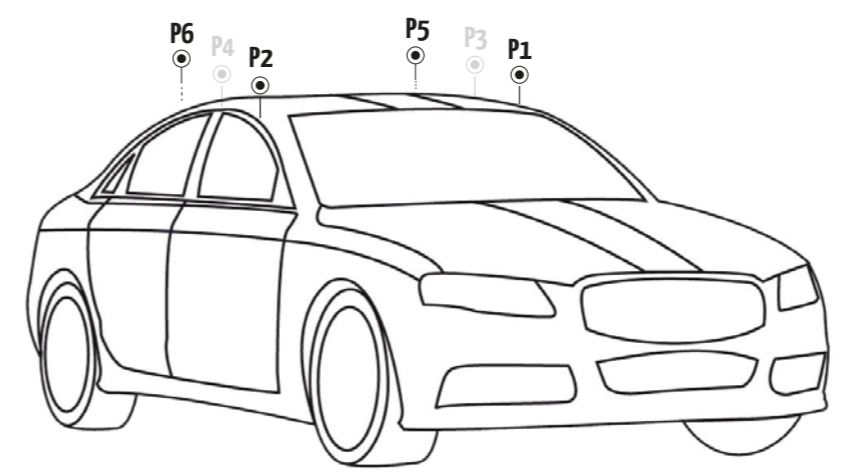

				P1	P2	P5	P6
Citroën							
C8	02-08	5	B00027 + B00020 + B.TCHA.23	s/n	s/n	s/n	s/n
Evasion	94-02	5	B00027 + B00020 + B.TCHA.23	s/n	s/n	s/n	s/n
Fiat							
Idea	03-12	5	B00027 + B00020	s/n	s/n	s/n	s/n
Panda (169)	03-12	5	B00027 + B00020	s/n	s/n	s/n	s/n
Ulysse II	02-10	5	B00027 + B00020 + B.TCHA.23	s/n	s/n	s/n	s/n
Ford							
Focus Wagon I / II	98-10	5	B00027 + B00020 + B.TCHA.23	s/n	s/n	s/n	s/n
Jaguar							
X-Type	01-09	4/5	B00031 + B00020	s/n	s/n	s/n	s/n
Lancia							
Phedra	02-10	5	B00027 + B00020 + B.TCHA.23	s/n	s/n	s/n	s/n
Z	94-02	4	B00027 + B00020 + B.TCHA.23	s/n	s/n	s/n	s/n
Peugeot							
806	94-02	5	B00027 + B00020 + B.TCHA.23	s/n	s/n	s/n	s/n
807	02-14	5	B00027 + B00020 + B.TCHA.23	s/n	s/n	s/n	s/n
Volkswagen							
Touareg I	02-10	5	B00027 + B00020 + B.TCHA.23	s/n	s/n	s/n	s/n
Volvo							
440	94-97	5	B00027 + B00020 + B00037	s/n	s/n	s/n	s/n
460	94-97	4	B00027 + B00020 + B00037	s/n	s/n	s/n	s/n
S40 I	95-04	4	B00027 + B00020 + B00037	s/n	s/n	s/n	s/n
V40	96-04	5	B00027 + B00020 + B00037	s/n	s/n	s/n	s/n

