





- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikli montaj Montaj kiti

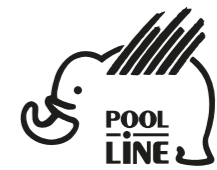

POOL-LINE ACCESORIOS, S.L.  
C. Esqueis, 19. P. I. Can Barri  
08415- Bigues i Riells. Barcelona (España)  
www.pool-line.net



**110002**  
Review 5/2019

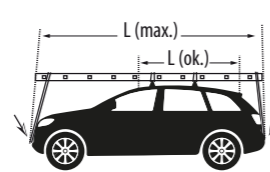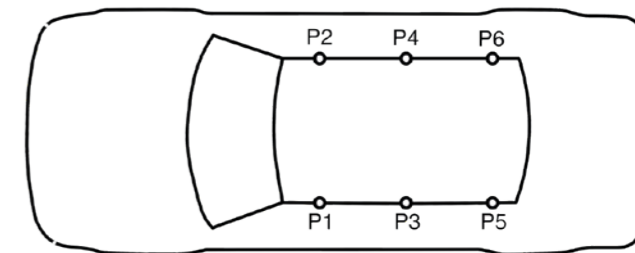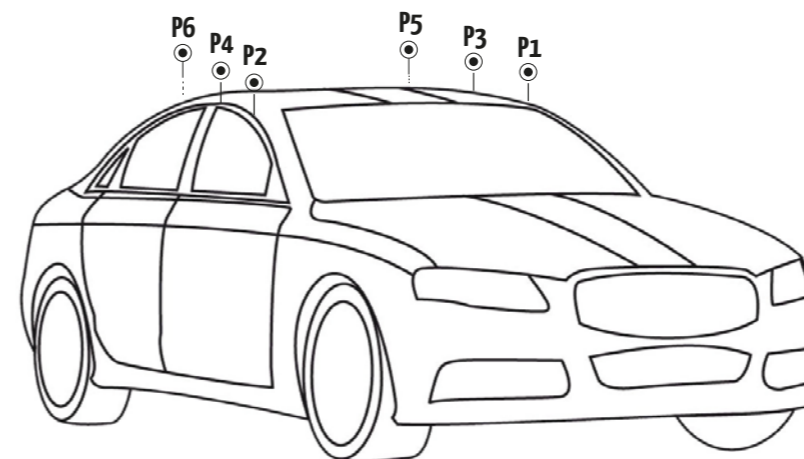

			P1	P2	P3	P4	P5	P6
<b>Citroën</b>								
AX	86-96	3/5	05	05			06	06
C3	02-10	5	06	06			05	05
Saxo	96-03	3	05	05			06	06
<b>Fiat</b>								
Bravo (typ 182)	95-01	3	05	05			06	06
<b>Peugeot</b>								
106 (I y II)	91-04	3	05	05			06	06
205	83-97	3	06	06			05	05
<b>Renault</b>								
18	78-86	4	05	05			06	06
<b>Toyota</b>								
Corolla (E120)	01-07	3	05	05	06	06		
Corolla (E120)	01-07	4	05	05			06	06
Corolla (E120)	01-07	5	05	05			06	06

