


- | | | |
|-----------|--------------------------|------------------|
| E | Instrucciones de montaje | Kit de fijación |
| C | Instruccions de muntatge | Kit de fixació |
| GB | Assembly instructions | Fixation Kit |
| F | Instruction de montage | Kit fixation |
| D | Montageanleitung | Stützfuß-Kit |
| PT | Instruções de montagem | Kit fixação |
| I | Istruzioni di montaggio | Kit di fissaggio |
| PL | Instrukcja montażu | Element mocujący |
| CZ | Montážní návod | Fixační kit |
| HU | Szerelési Utasítás | Rögzítő készlet |
| RO | Instructiuni de montaj | Kit de fixare |
| HR | Detaljne upute | Kit za montažu |
| TU | Öncelikle montaj | Montaj kiti |

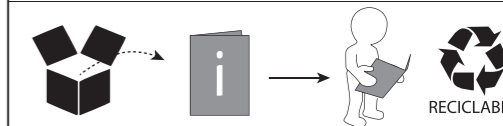




POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1085



110012


Review 5/2019

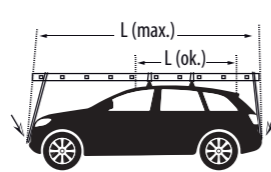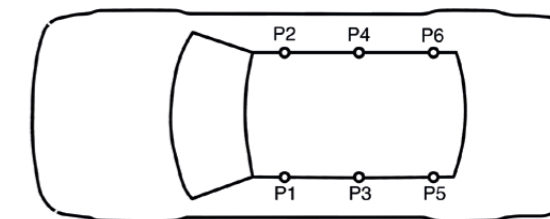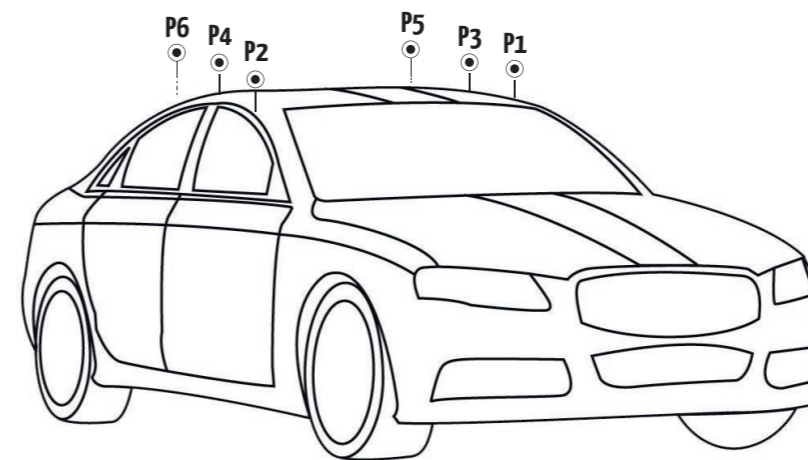


			P1	P2	P3	P4	P5	P6
ALFA ROMEO								
BRERA	05 - 11	3	07	07	07	07		
GT	04 - 10	3	07	07	07	07		
HYUNDAI								
COUPE I/II J2, RD	96 - 02	2	07	07	07	07		
COUPE III GK	02 - 07	2	07	07	07	07		
SUBARU								
IMPREZA II (GD)	01 - 07	4	07	07	07		07	07
SUZUKI								
VITARA I (Techo de fibra/ Fiber roof)	88 98	3	07	07	07	07		
TOYOTA								
CELICA (T20)	94 99	3	07	07	07	07		
CELICA (T23)	99 - 06	3	07	07	07	07		




ALFA ROMEO
HYUNDAI
SUZUKI
TOYOTA

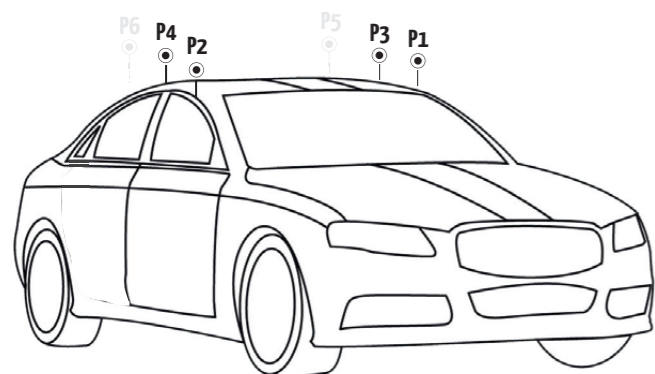


1

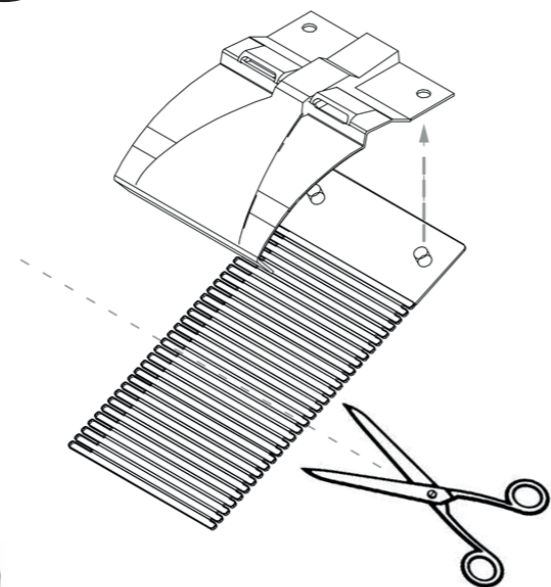


2

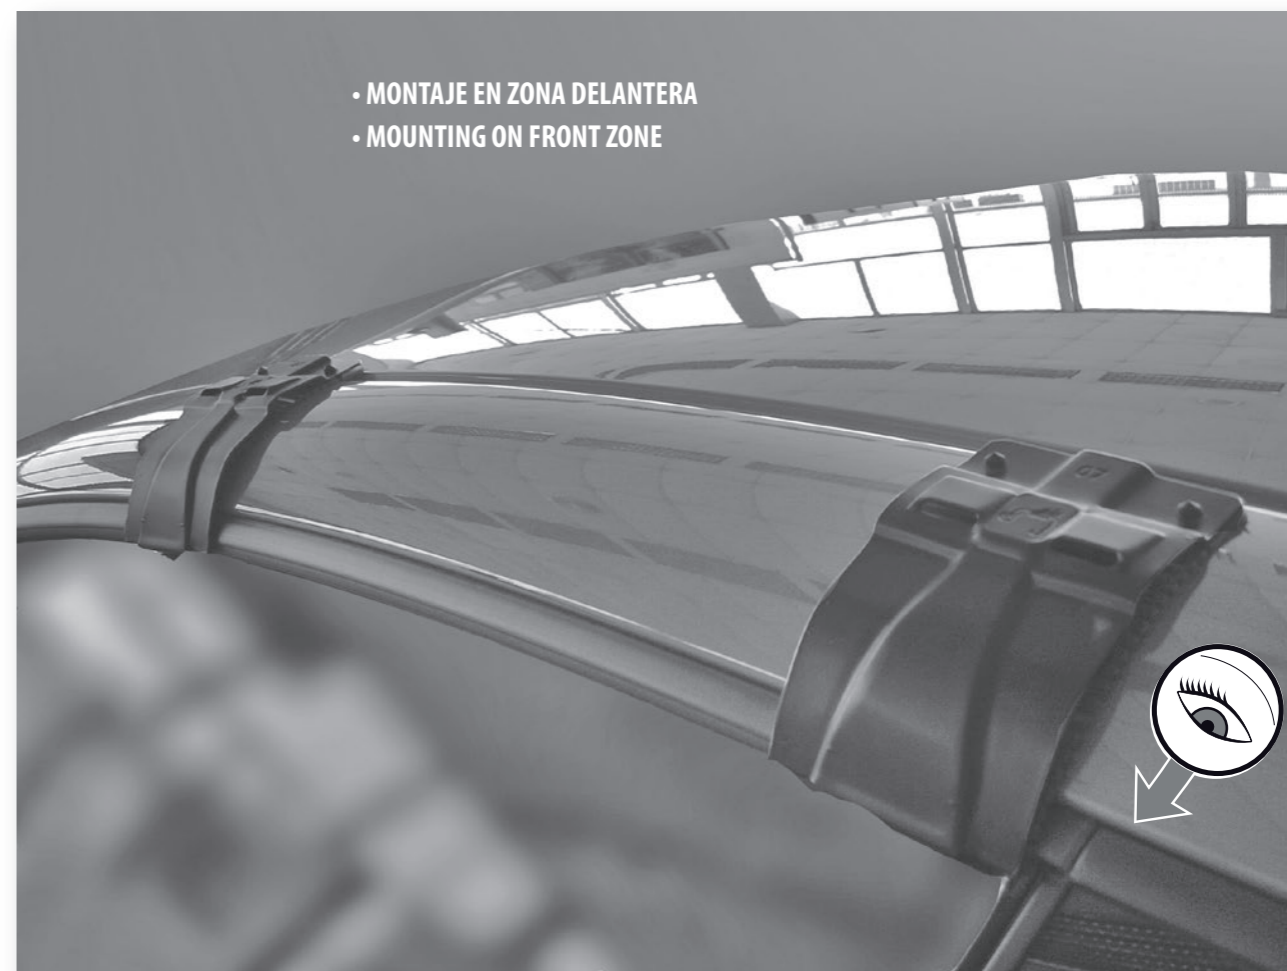

SUBARU

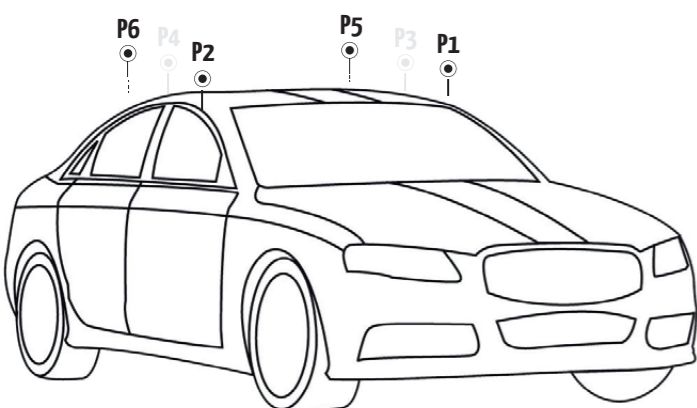

1

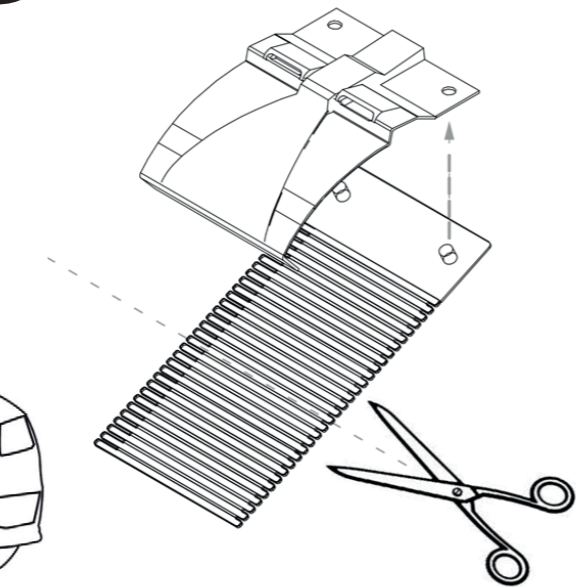

2

