


- E** Instrucciones de montaje
- C** Instruccions de muntatge
- GB** Assembly instructions
- F** Instruction de montage
- D** Montageanleitung
- PT** Instruções de montagem
- I** Istruzioni di montaggio
- PL** Instrukcja montażu
- CZ** Montážní návod
- HU** Szerelési Utasítás
- RO** Instrucțiuni de montaj
- HR** Detaljne upute
- TU** Öncelikle montaj

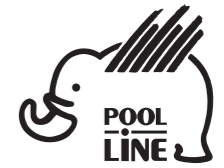

POOL-LINE ACCESORIOS, S.L.  
C. Esqueis, 19. P. I. Can Barri  
08415- Bigues i Riells. Barcelona (España)  
www.pool-line.net


**!** **50** **KG.**  
**MAX.**

Nº HOMOLOGACIÓN: **E9** 26R04/00\*1085\*01


**!** **i** **!** **!** **!** **!**  
RECYCLABLE

**EVO-FIX II ESPECIFIC ALU**  
**111045**





Review 12/2022

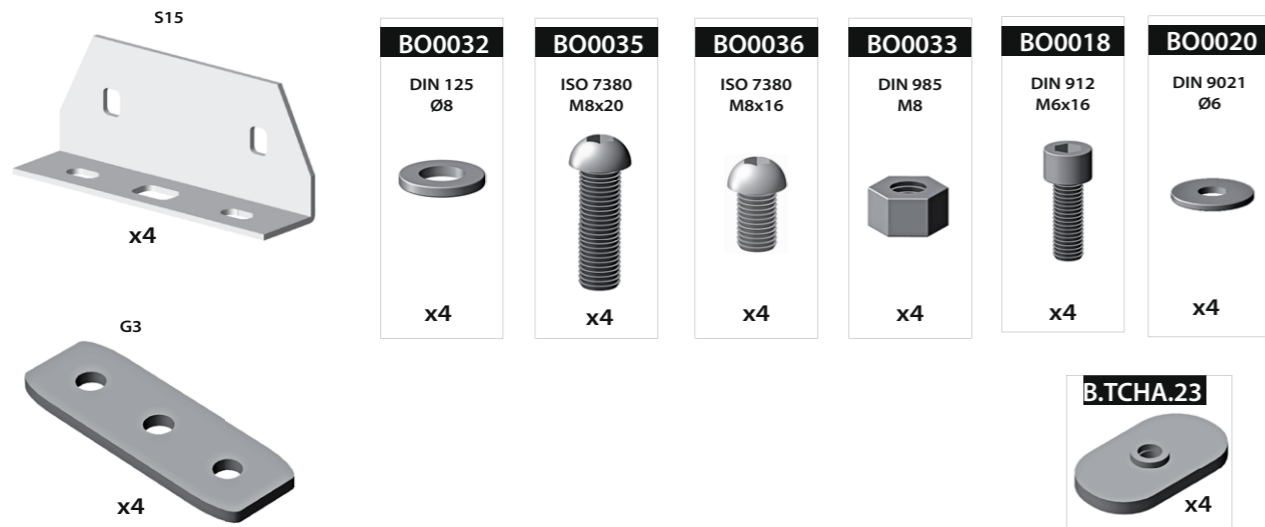

<b>CITROËN</b>		
C15	84 - 05	B00036 + B00032 + B00033
<b>FIAT</b>		
DOBLO I	01 - 09	B00018 + B00020
DOBLO II	10 -	B00018 + B00020
<b>FORD</b>		
TOURNEO CONNECT	04 - 13	B00036 + B00032
TRANSIT CONNECT	04 - 13	B00036 + B00032
<b>MERCEDES</b>		
CITAN W415 L3--H1	12 -	B00035 + B00032
<b>NISSAN</b>		
NV250 L2-H1	19 - 21	B00035 + B00032
<b>OPEL</b>		
COMBO B (1 tornillo) L1--H1	93 - 02	B00018 + B00020 + B.TCHA.23
COMBO D CARGO	12-	B00018 + B00020
<b>RENAULT</b>		
EXPRESS L1--H1	91 - 00	B00035 + B00032 + B00033
KANGOO II L3--H1	10 -	B00036 + B00032
<b>VOLKSWAGEN</b>		
CADDY III	04 - 11	B00036 + B00032
CADDY III.2	11 - 15	B00035 + B00032
CADDY IV	15 - 20	B00035 + B00032
CADDY V	20 -	B00035 + B00032


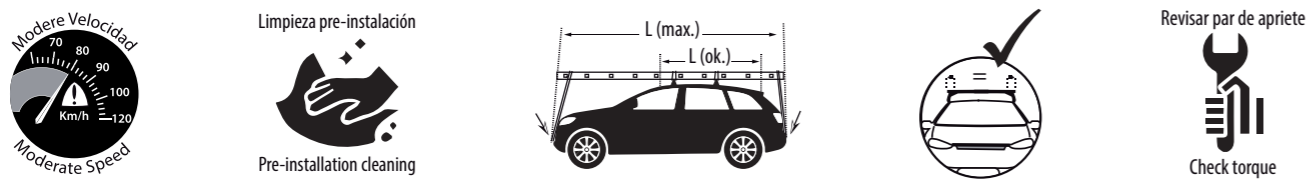


Nota: Guardar instrucciones para posibles montajes y desmontajes.

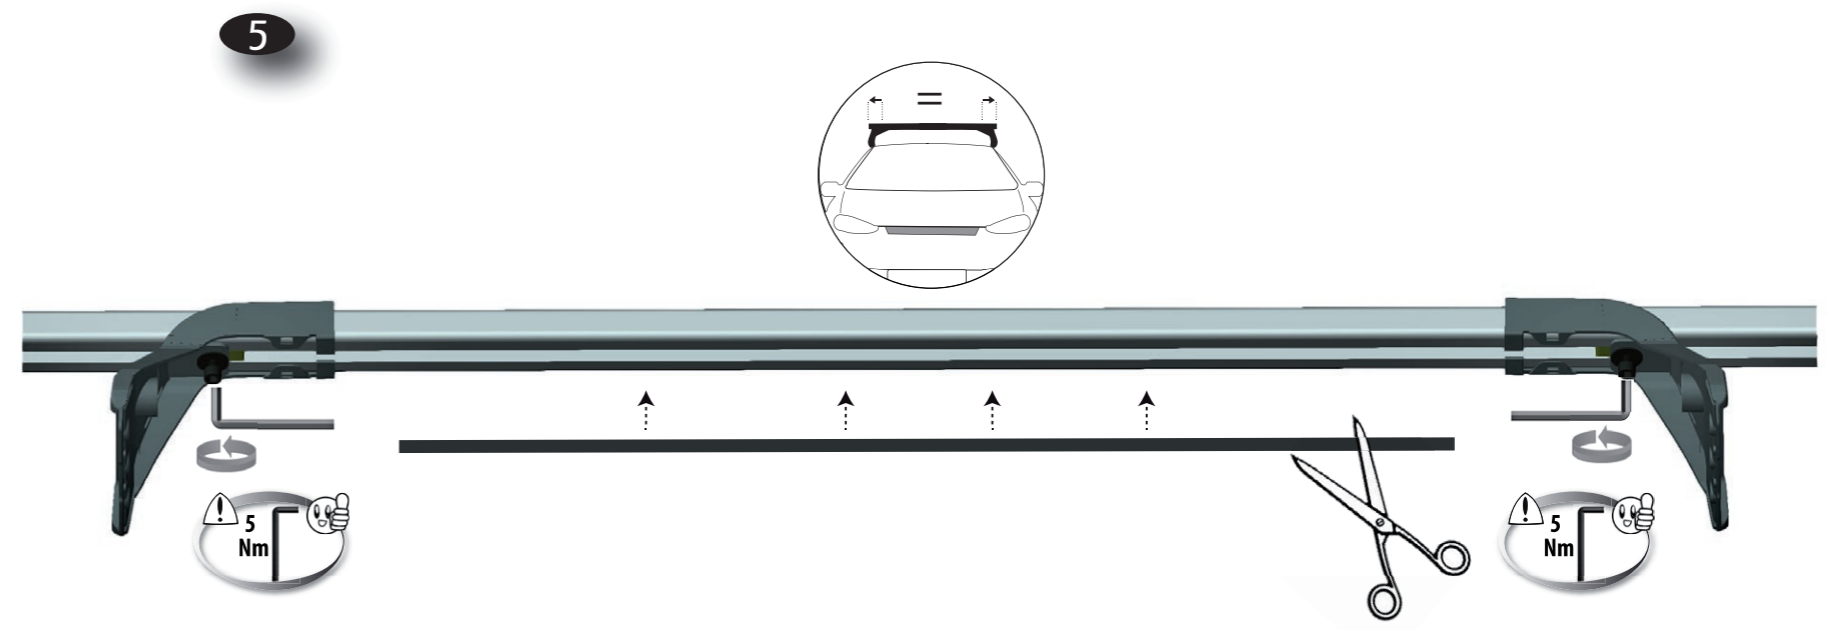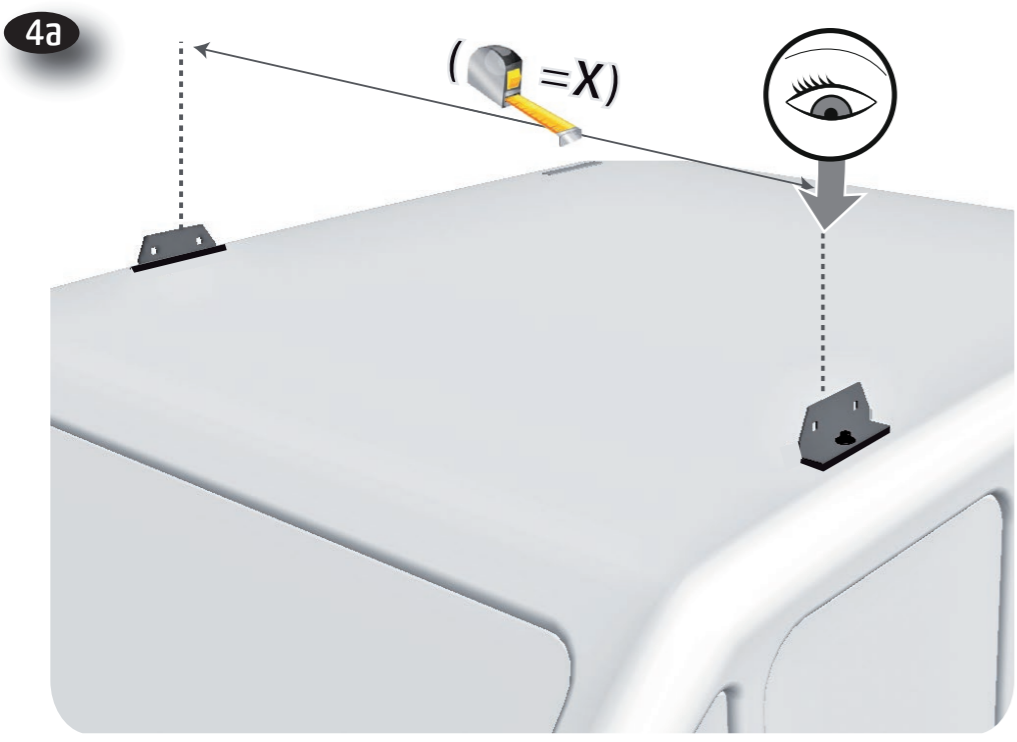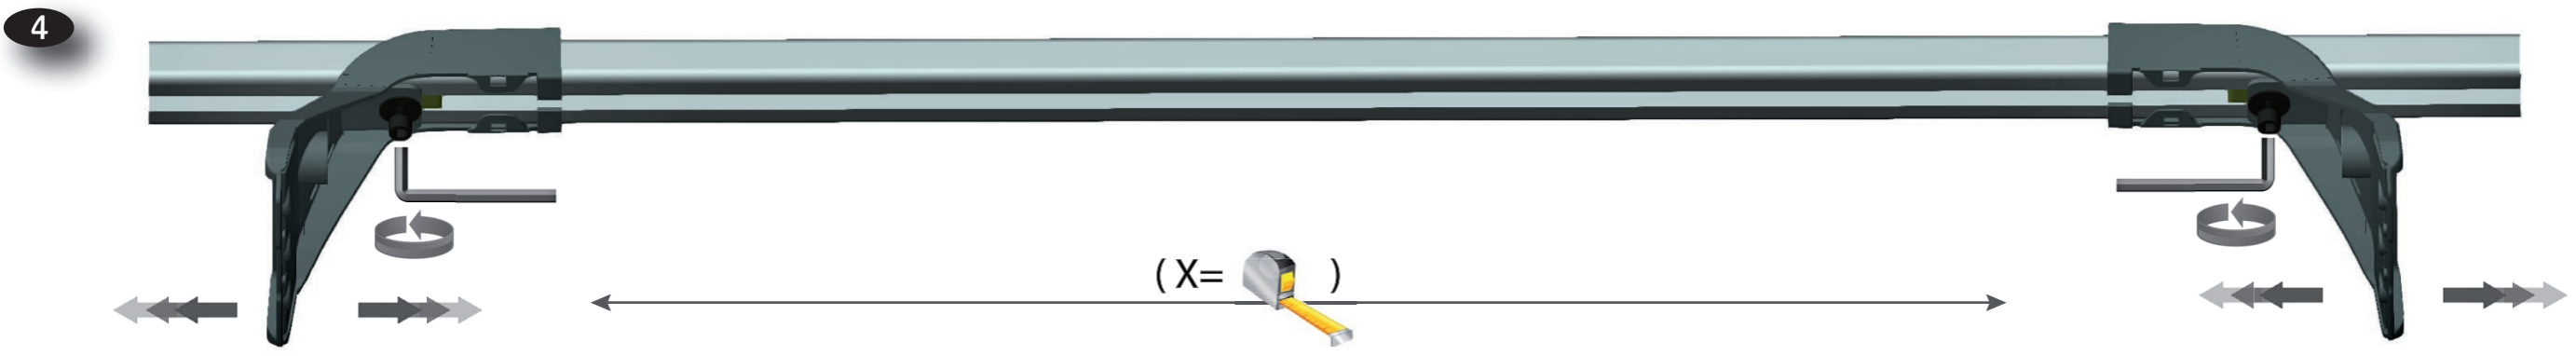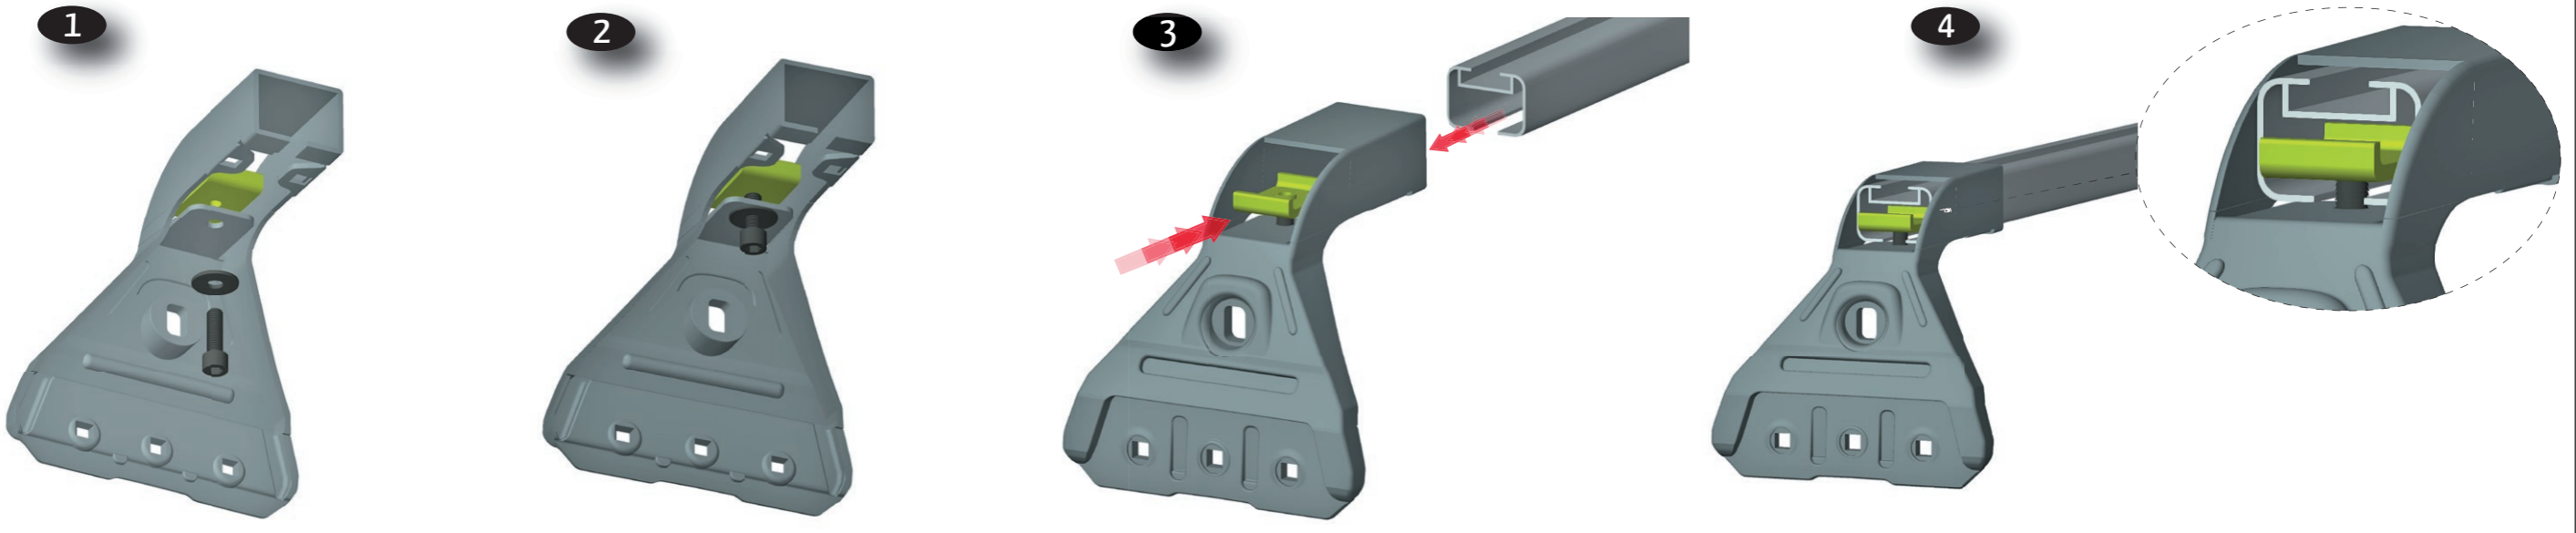






1

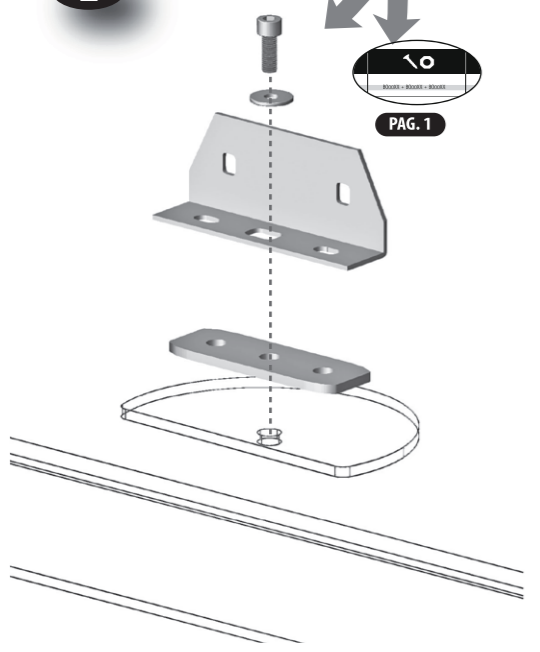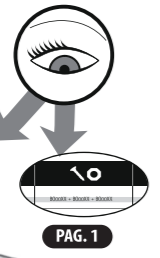


\* Opel Combo B

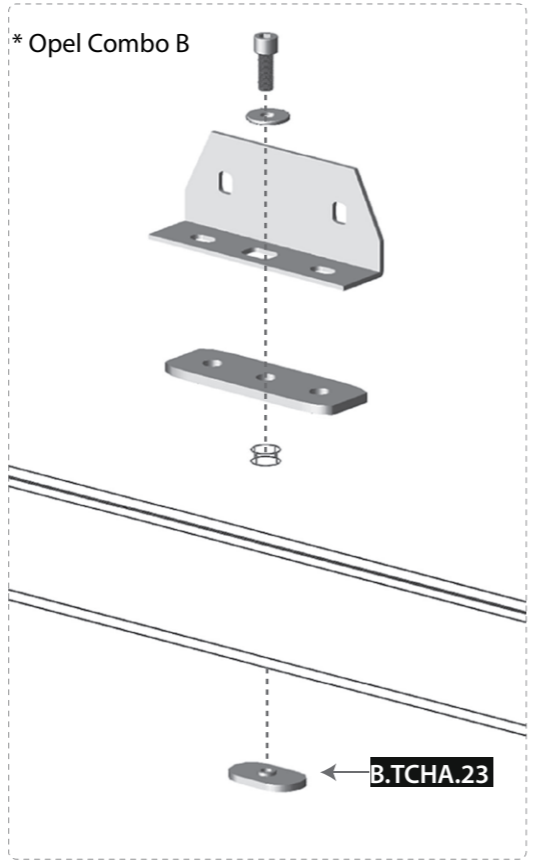

2

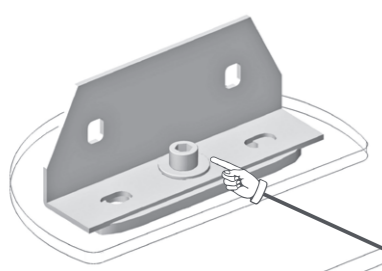


3

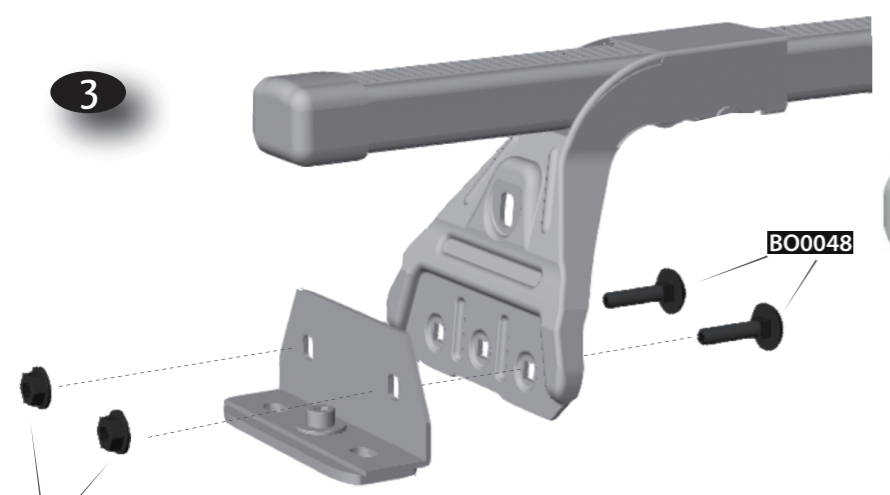


BO0048

4

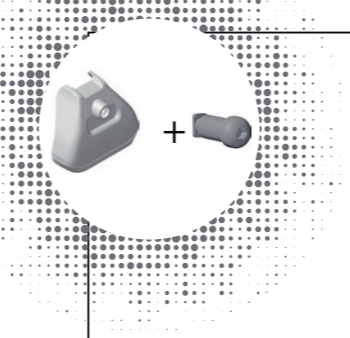

A

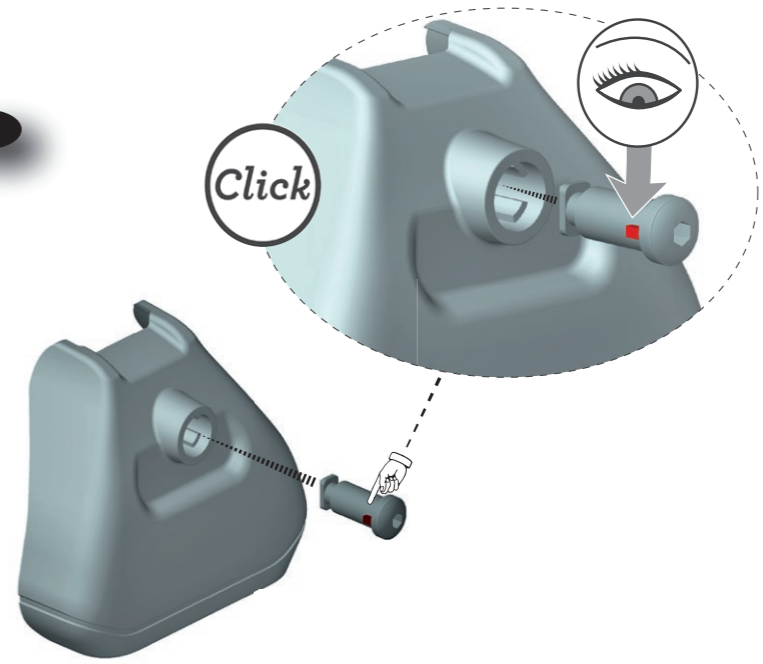

B



C



D



