


N	Q		Q		Q
1			1+1		2
2			1+1		2
3					6
4					1

N	BO0061	Q
8		24
9		24


N	BO0010 x 3	Q
10		6
11		6

- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

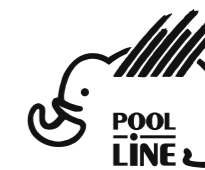


POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1043

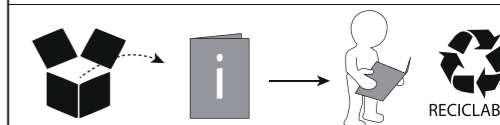

121081


Rv: 2/2023

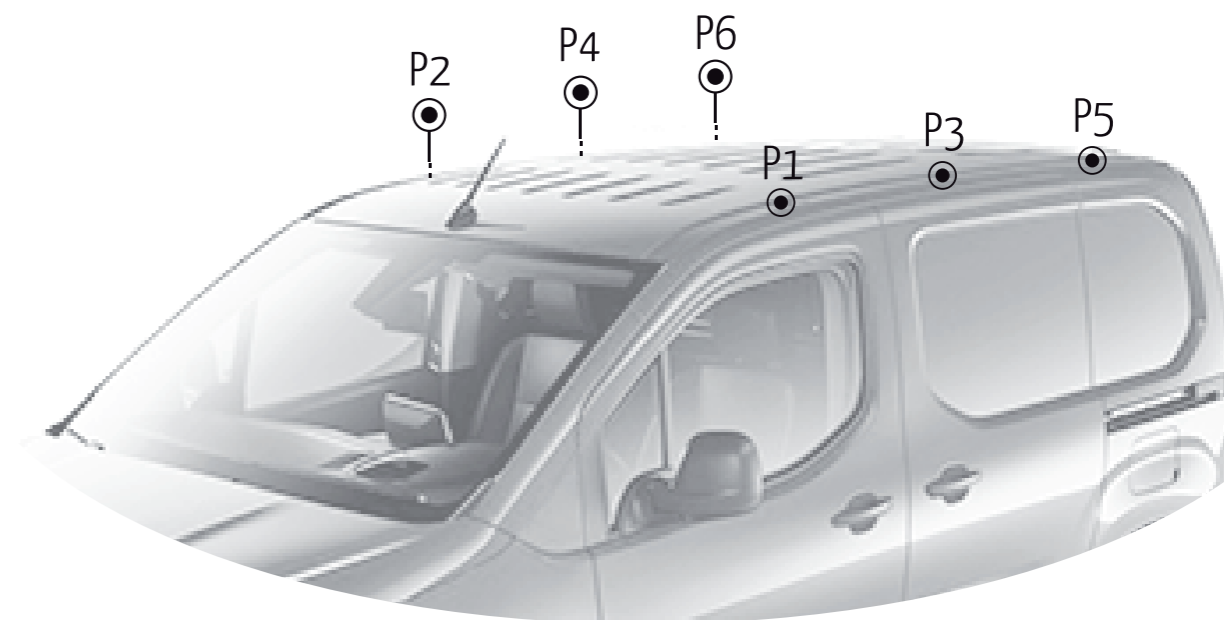


					P1	P2	P3	P4	P5	P6
CITROËN										
BERLINGO III (M)	L1	H1	2018->	BO0010	225+1A	226+2A	224+1B	224+1B	220+1B	220+1B
FIAT										
DOBLÓ III/K9 (M)	L1	H1	2022->	BO0010	225+1A	226+2A	224+1B	224+1B	220+1B	220+1B
OPEL										
COMBO E (M)	L1	H1	2018->	BO0010	225+1A	226+2A	224+1B	224+1B	220+1B	220+1B
PEUGEOT										
PARTNER III (M)	L1	H1	2018->	BO0010	225+1A	226+2A	224+1B	224+1B	220+1B	220+1B
TOYOTA										
PROACE CITY (M)	L1	H1	2019->	BO0010	225+1A	226+2A	224+1B	224+1B	220+1B	220+1B




Limpieza pre-instalación
Pre-installation cleaning

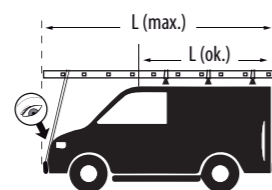

Revisar par de apriete
Check torque


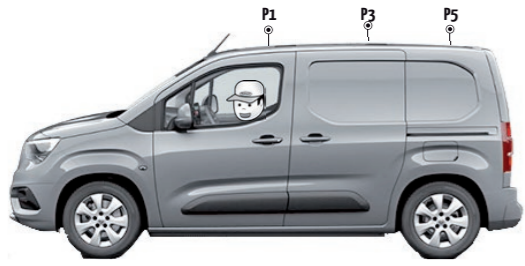


TALLA M (L1)

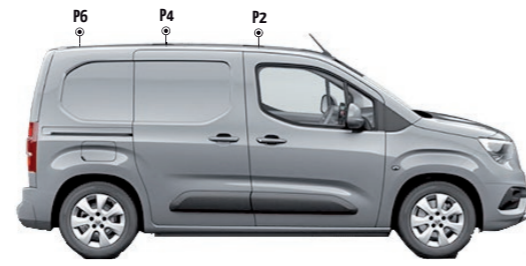


P1	P2	P3	P4	P5	P6
225+1A	226+2A	228+1B	228+1B	220+1B	220+1B
225+1A	226+2A	228+1B	228+1B	220+1B	220+1B
225+1A	226+2A	228+1B	228+1B	220+1B	220+1B

Pag. 1

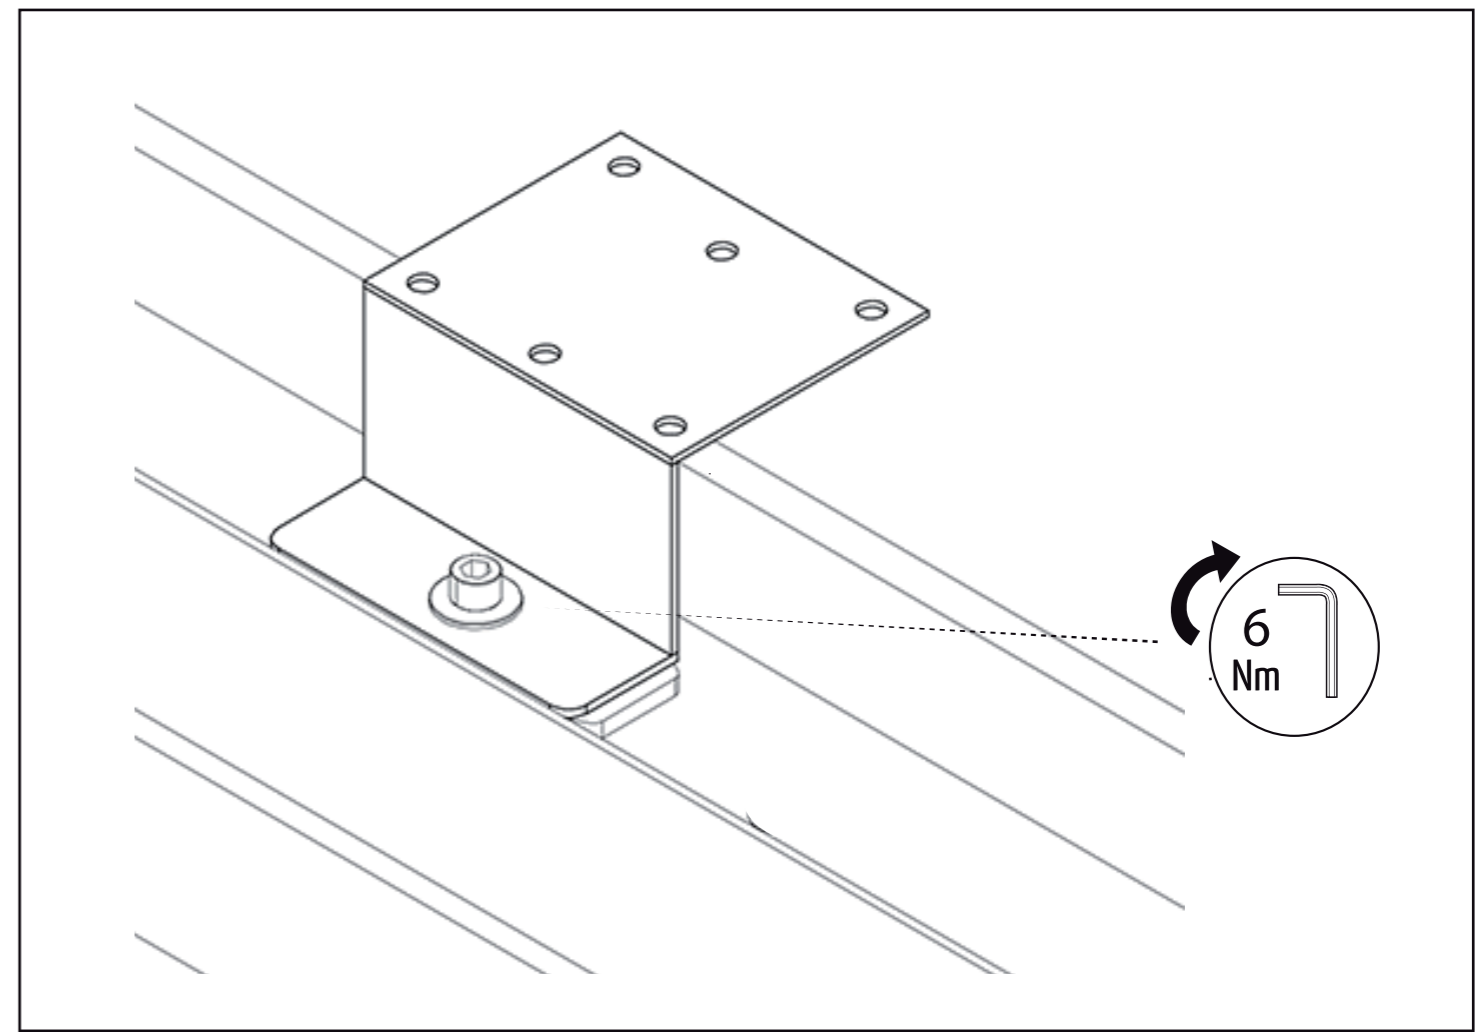
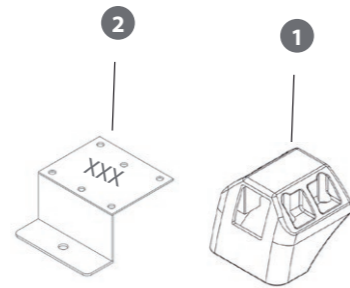


6 Nm

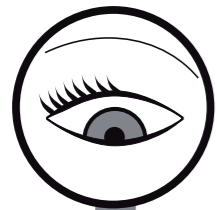

	10	P1	P2
OX	B000010		
OX-	B000010		
	B0000Y		

Pag. 1

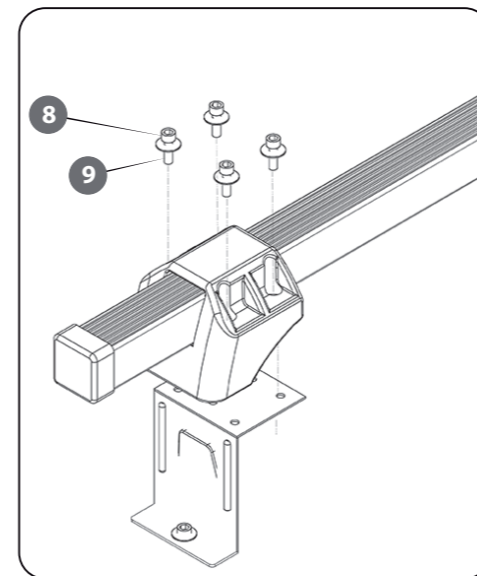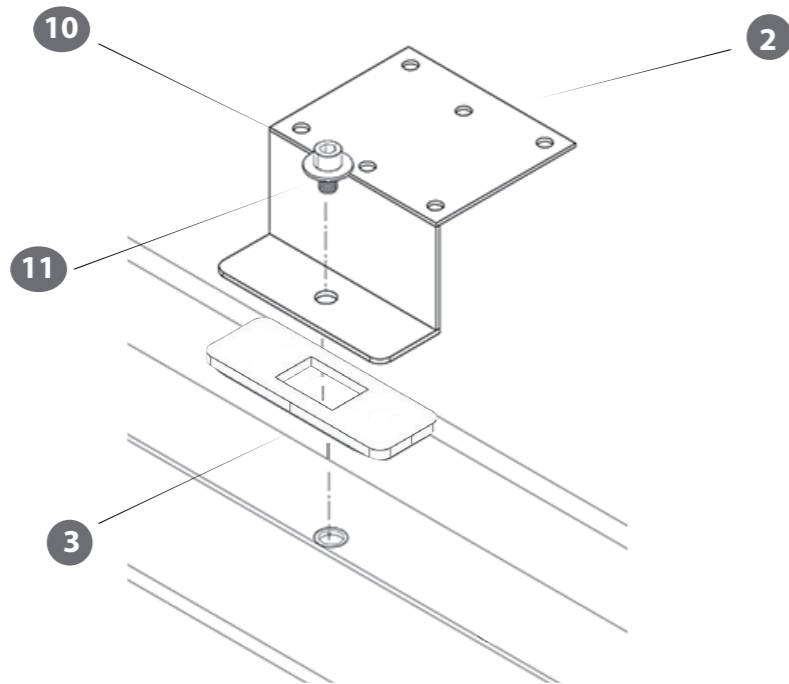

5 Nm

