


N			Q			Q			Q
1			1+1		2		2		2
2			1+1		2		2		2
3									6
4									1

N	BO0061	Q
8	DIN912 M6x20	24
9	DIN125	24


N	BO0006 x 3	Q
10	DIN912 M6x16	6
11	DIN9021 Ø6	6

- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikli montaj Montaj kiti

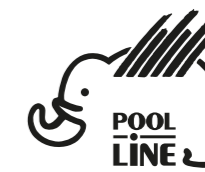


POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1043

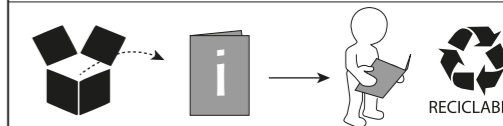


121761

Rv: 04/2024

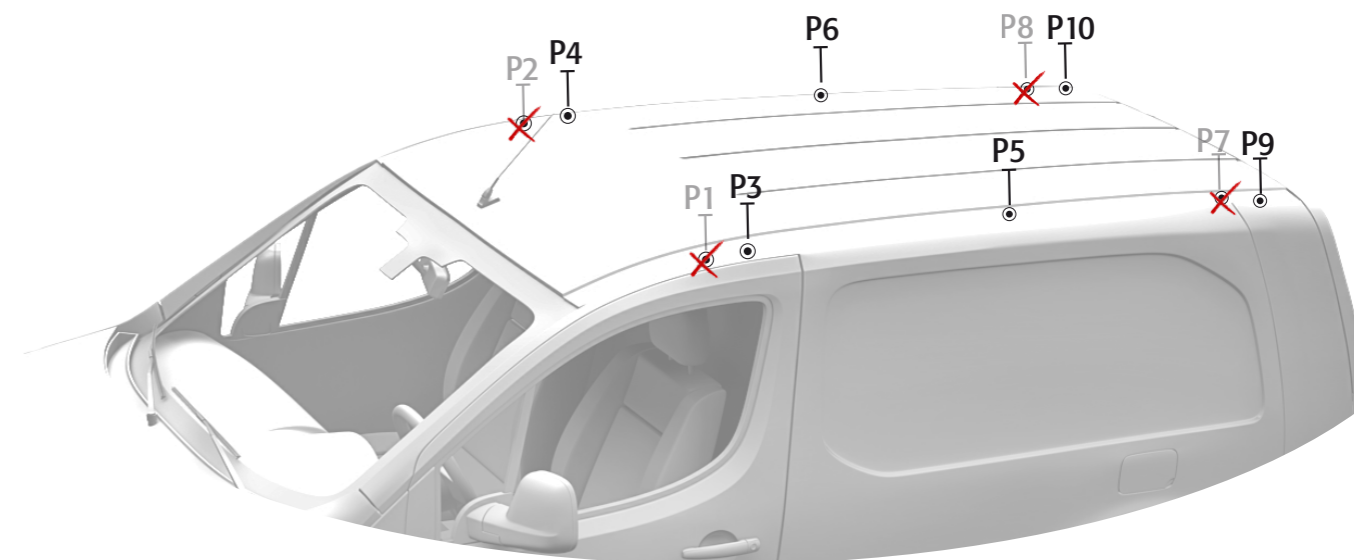

Limpeza pre-instalación
Pre-installation cleaning

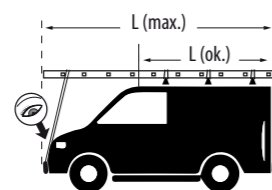

Revisar par de apriete
Check torque

			P1	P2	P3	P4	P5	P6	P7	P8	P9	P10
CITROËN												
Nemo	2008 -	BO0006	✗	✗	221+1A	222+2A	202+1B	202+1B	✗	✗	223+1C	223+1C
FIAT												
Fiorino II	2008 -	BO0006	✗	✗	221+1A	222+2A	202+1B	202+1B	✗	✗	223+1C	223+1C
PEUGEOT												
Bipper	2008 -	BO0006	✗	✗	221+1A	222+2A	202+1B	202+1B	✗	✗	223+1C	223+1C

